




**Members Club
Entertainment System
Control Guide**

BEFORE YOU START

GET TO KNOW YOUR REMOTE




The Basics

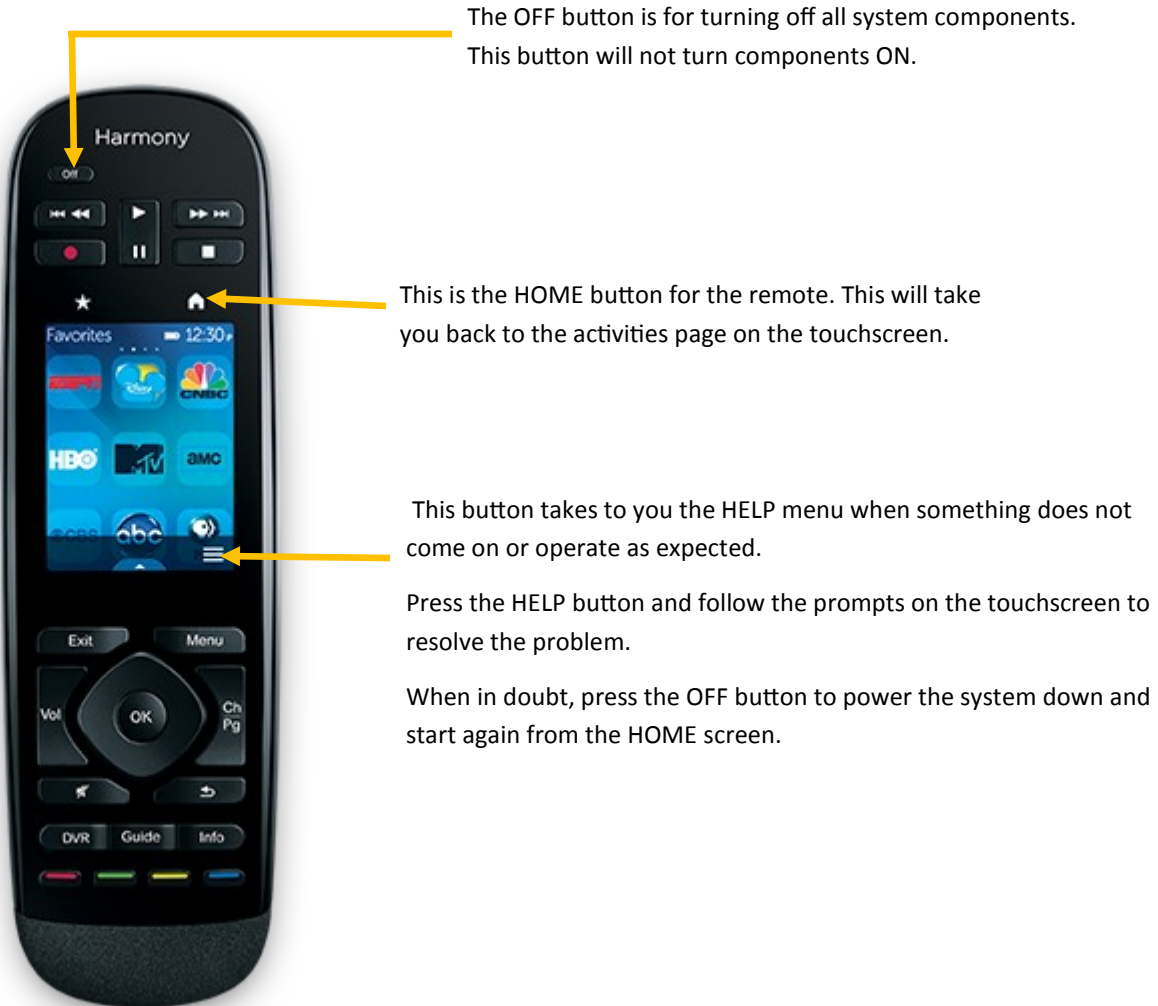

To Watch Cable TV

Simply touch the Watch TV button on the touchscreen.
The button will turn a darker blue. The remote will power up the correct devices and set up the system to watch

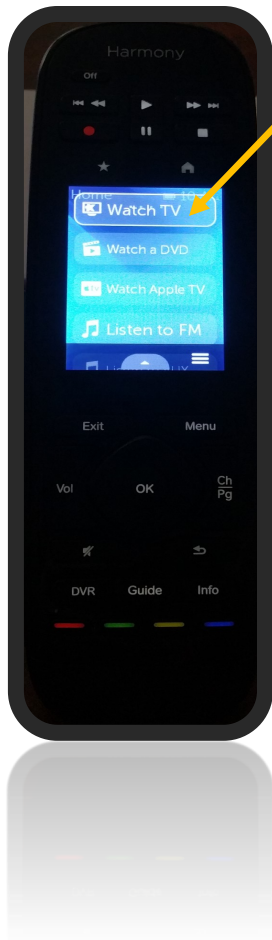

The remote will land on the FAVORITES page. All the buttons on the remote are now controlling the TV and Cable Box.

You can tap on a channel from the favorites screen and it will take you to that channel on the TV. Note the four dots at the top of the Favorites page. You can swipe left or right to access the next page. The four pages on this activity are:


1. Favorites
2. DVR Buttons
3. Number/Channel Buttons
4. Home Screen



The Basics

ALWAYS use the **Harmony Remote Control** to operate the system.

When the system is off, the remote will be at the **HOME SCREEN**.

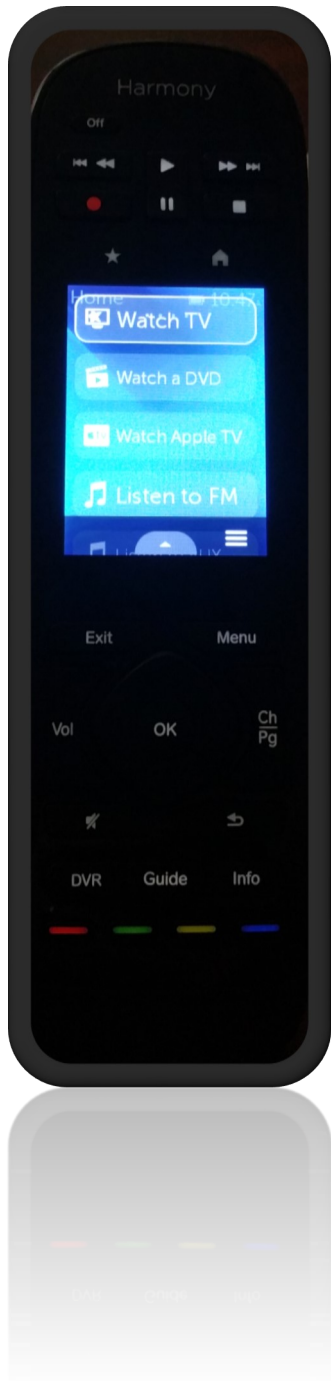


The buttons on the touch screen are Activity Buttons.

You can swipe the screen up or down to expose more activities.

There are a total of 7 Activities:


1. Watch TV
2. Watch DVD
3. Watch Apple TV
4. Listen to FM
5. Listen to AUX
6. Watch Smart TV
7. Side Wall HDMI

TO WATCH A DVD

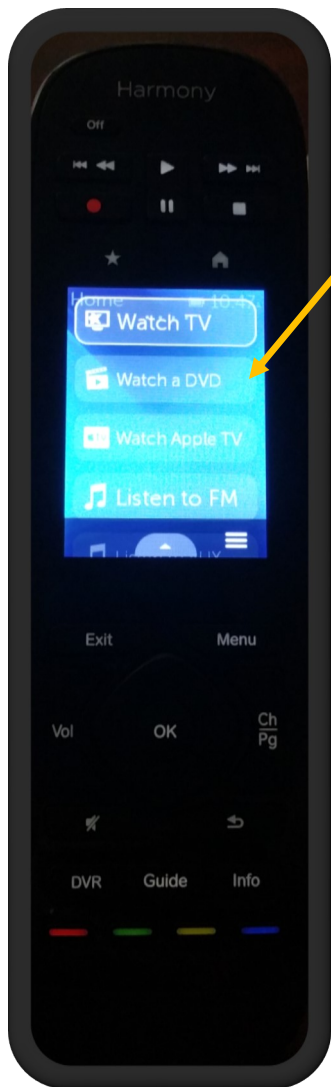

Tap the Watch a DVD button on the touchscreen.


The remote will power on devices needed to Watch a DVD.

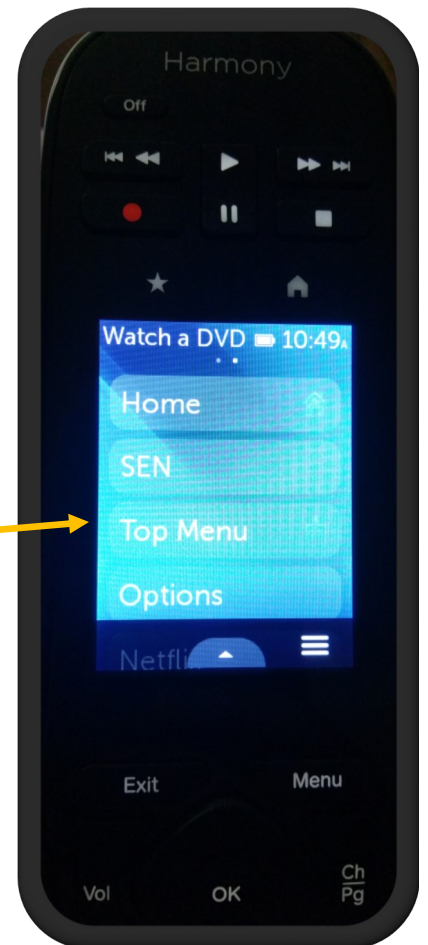


The remote will land on the DVD home page.

Now all of the buttons on the remote are for watching a DVD or Netflix within the DVD player


Watch Apple TV

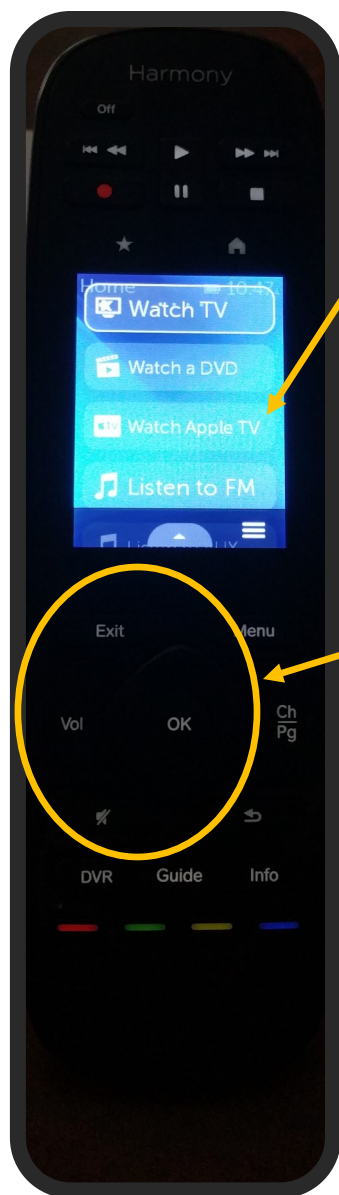

Simply Touch the Watch Apple TV Button

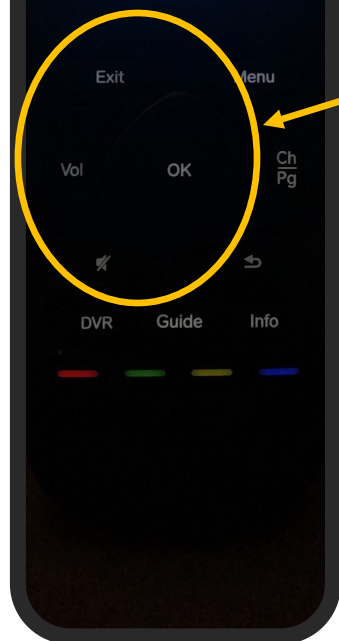


These buttons are the main controls for Apple TV

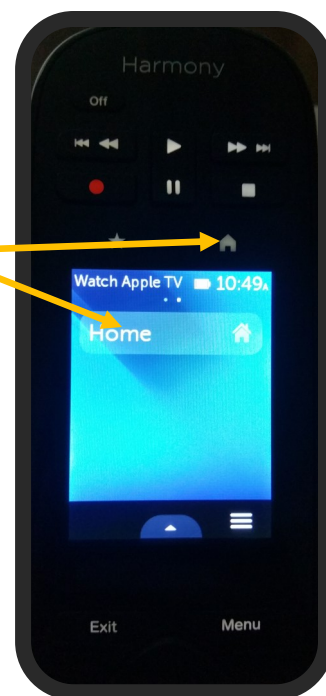


The HOME button will always take you back to the remote's main HOME PAGE

To Listen to FM Radio

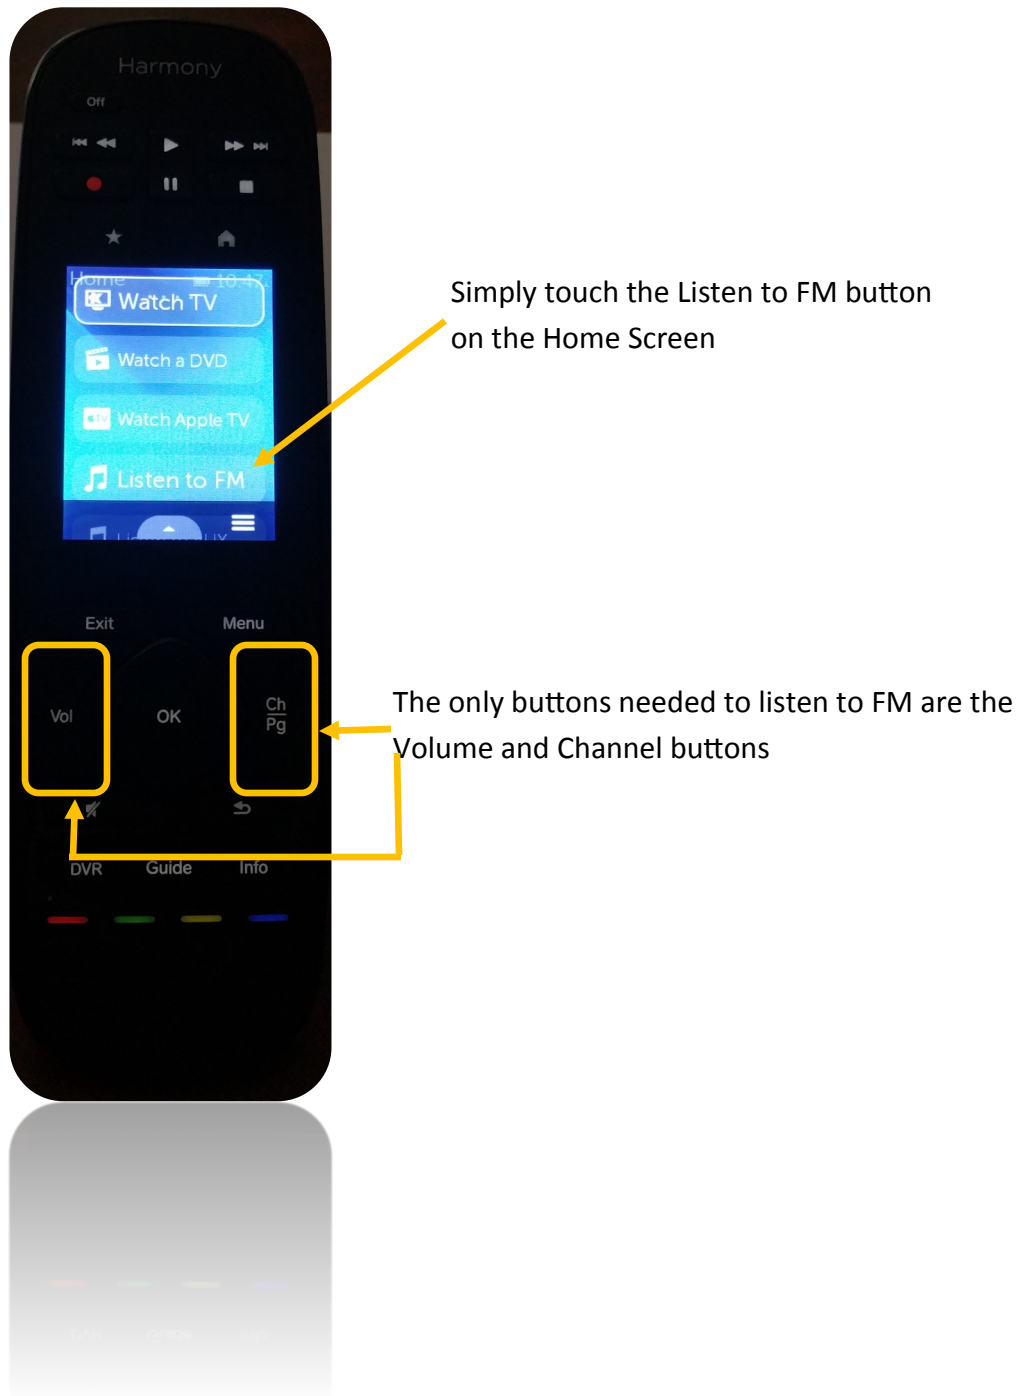

Listen to Aux

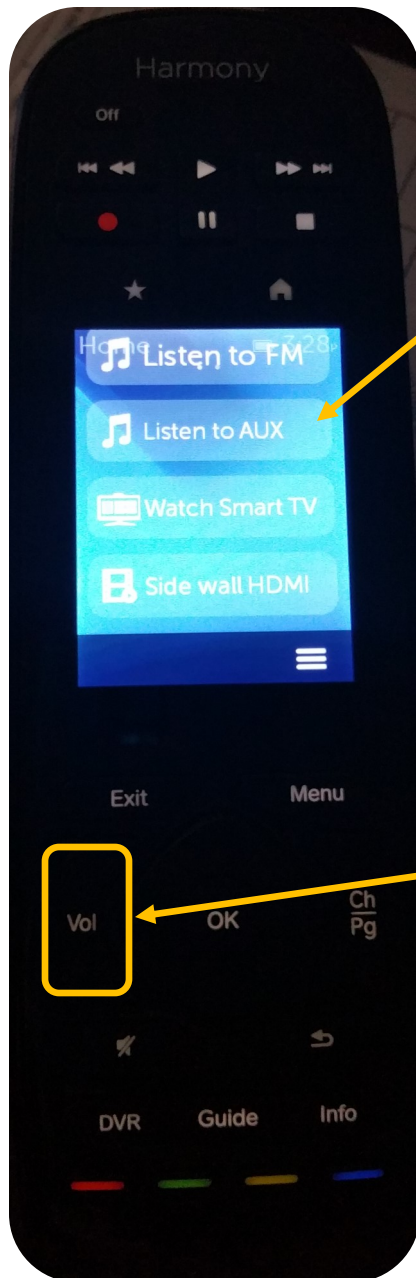

Simply tap the Listen to AUX button on the home screen

The only buttons active in this setting are the Volume +/-


Plug in your iPod, iPad, iPhone, or other smartphone/tablet using the headphone jack on your device and the 1/8" cable next to the remote charging cradle.

You can now play your music content over the speakers.



1/8th" jack


Watch Smart TV

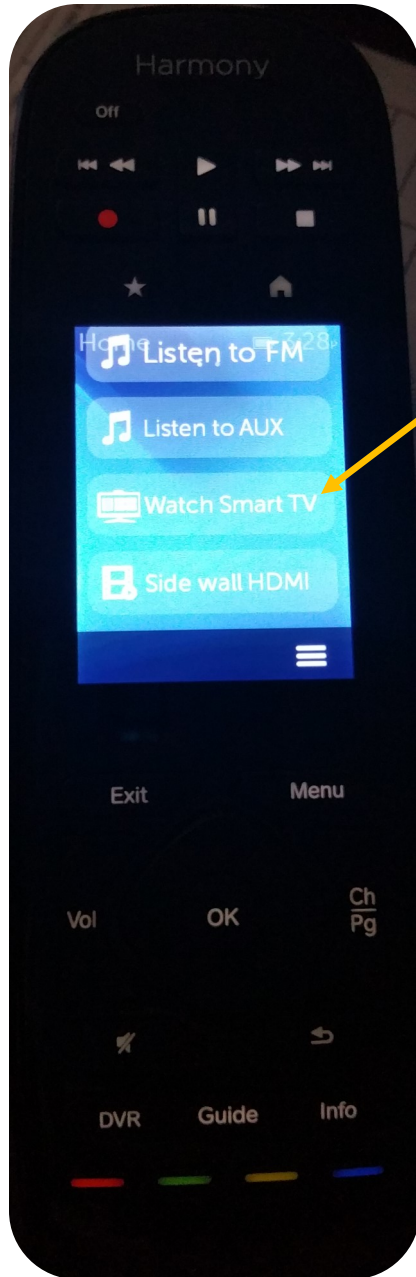

Tap the Watch Smart TV button on the Home Screen

All of the buttons on the remote are used to control the Smart TV functions.

To Connect to Sidewall HDMI Port

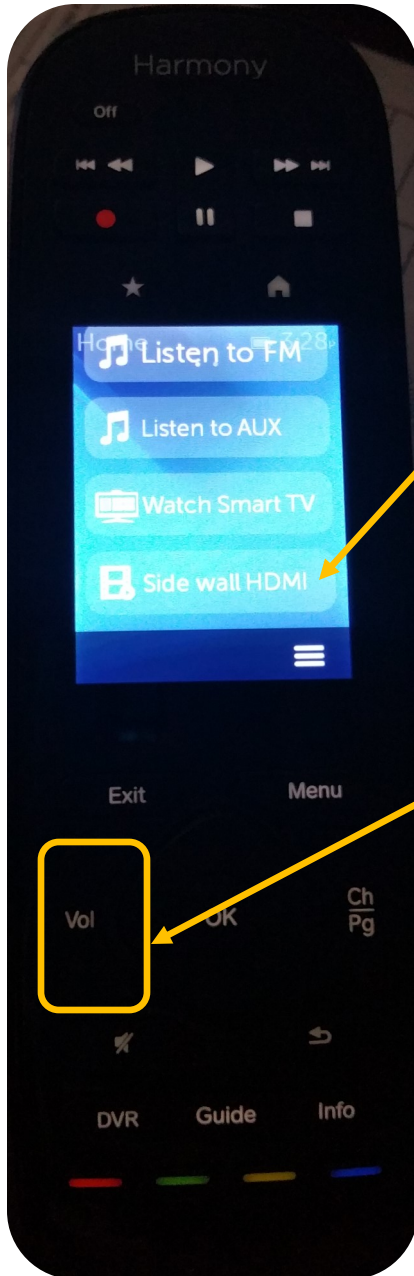

Select Side wall HDMI button on the Home Screen

The only buttons on the remote active in this mode are the Volume +/- button

Connect your HDMI device to the side wall where the TV is located. This will enable the HDMI input. You can now view and listen to your device on the TV.